



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Display		Info
	DBFB		Smart
	Play CD		Play
	Pause CD		Pause
	Stop CD		Stop
	Play		Red
	I<</- Tuner/band		I<<
	>>I/+		>>I
	<> Tape		<<
	<< Tape		<<
	>> Tape		>>
	Rec		Rec
	Dolby NR		Dual
	Dir Mode		Media
	CD Repeat		Text
	Stereo/Mono		Options

Originalfernbedienung Ersatzfernbedienung

	Tuning / Play		Blue
	Tuning / Play		Shift + Play
	Vol+		Vol +
	Vol-		Vol -
	Enter/On/Off		Ok
	Up/Memory		Up
	Right/Timer		Right
	Left/Timer Set		Left
	Down/Sleep		Down

