








Originalfernbedienung Ersatzfernbedienung

	Sleep		Sleep / Timer
	Power		Power
	VIDEO 1		Shift + 4
	DVD/LD		Shift + 2
	VIDEO 2		Shift + 9
	TV / SAT		Shift + 1
	VIDEO 3		Shift + Guide / EPG / -/-
	TV / SAT		Shift + 0
	AUX		Shift + 7
	PHONO		Shift + 8
	CD/SACD		Shift + 3
	MD/TAPE		Shift + 5
	TUNER		Shift + 6
	1		1
	2		2
	3		3
	4		4

Originalfernbedienung Ersatzfernbedienung

	5		5
	Enter 2		Shift + OK
	6		6
	7		7
	8		8
	9		9
	>10		Guide / EPG / -/-
	0		0
	Enter		OK
	D.Tuning		Smart / List
	D.Skip/CH/Presets		CH+ / Page+
	D.Skip/CH/Presets -		CH- / Page-
	Display		Display / Media
	A.F.D.		Red / Netflix / Search
	2CH / Off		Green / APP / Repeat
	MULTI CH / 2CH DIRECT		Info / Angle
	Mode-		<< / Tune-





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Mode+		>> / Tune+
	Muting		Mute / Dimmer
	Test Tone		Text / Goto
	Main Menu		Menu / Home
	Master Vol+		Vol+
	Menu Left		Left
	Menu Right		Right
	+		Blue / Prime Video / Random
	Master Vol-		Vol-
	-		Yellow / YouTube / Repeat

