













 








 

 





 

 

 













Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Display	 Display / Media	 >> /Preset+	 >> / Preset+
 Power	 Power	 <</Tuning-	 << / Tune-
 Function-	 Shift + Down	 Stop	 Stop / Hold
 Function+	 Shift + Up	 >>/Tuning+	 >> / Tune+
 Sound	 Sound / Title	 Vol+	 Vol+
 Menu	 Menu / Home	 Vol-	 Vol-
 Timer	 Sleep / Timer		
 Up	 Up		
 Folder-	 CH- / Page-		
 OK	 OK		
 Folder+	 CH+ / Page+		
 Down	 Down		
 Return	 Back / Return		
 Clear	 Exit / Cancel / Clear		
 I<</Preset-	 I<< / Preset-		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		

