

 

 

 


 





 
 

 








 
 
 
 
 
 

 



 


 

 

 


 

 
 
 
 


 


 


 
 
 
 

 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Theatre		Smart
	One-Touch Play	 + 	Shift + Play
	Eject		Eject
	Sleep		Sleep
	Display	 + 	Shift + Info
	Function		Options
	Tone		3D
	Night	 + 	Shift + Sleep
	Dimmer	 + 	Shift + Mute
	Repeat		Text
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Originalfernbedienung Ersatzfernbedienung

	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	Picture Navi		List
	Audio		Dual
	Subtitle		Subt
	D.Tuning		Media
	Angle		Format
	DVD Top Menu	 + 	Shift + Menu
	DVD Menu		D. Menu
	Up		Up
	Left		Left
	OK		Ok
	Right		Right



