



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Night Mode		Rec
	Tuner Menu		Menu
	Dynamic Bass		List
	Sleep		Sleep
	Sound Field-		Ch -
	Sound Field+		Ch +
	Muting		Mute
	DVD Menu		D. Menu
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7

Originalfernbedienung Ersatzfernbedienung

	8		8
	9		9
	10/0		0
>10 button icon"/>	>10		Guide
	Function		Smart
	Display		Info
	DVD Setup		Options
	Subtitle		Subt
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Tv/Video		TV/R





Originalfernbedienung Ersatzfernbedienung

	Dimmer		Format
	Pause		Pause
	Play/Select		Play
	Stop		Stop
	<</Tuning-/<l		<<
	Tuning+/Slow		>>
	>> Preset+		>>
	<</Preset-		<<
	Audio		Dual
	Repeat		Text
	DVD Display		Media
	Enter		Pre Ch
	DVD Top Menu		Shift + Menu
	Band		3D
	Angle		Green
	Play Mode		Shift + Play

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	Tv/Video		TV/R
	Muting		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	>10		Guide
	Function		Smart
	Band		3D
	Enter		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Tv CH+		Ch +
	Tv CH-		Ch -
	Display		Info

