

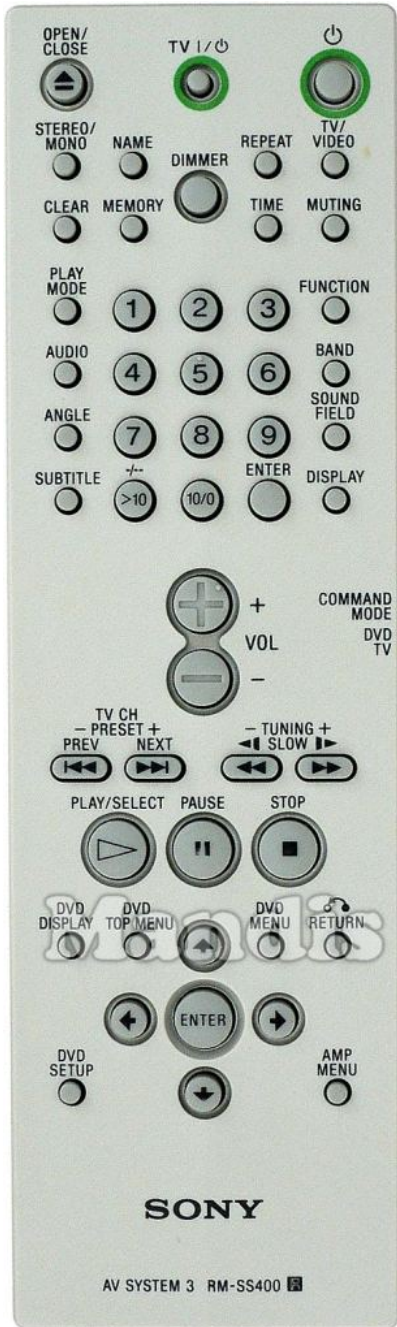 
Originalfernbedienung Ersatzfernbedienung

	Open/Close		Eject / Surround
	Power		Power
	Stereo/Mono		Shift + Audio / Lang I/II
	Name		Text / Goto
	Dimmer		Shift + Mute / Dimmer
	Repeat		Green / APP / Repeat
	Tv/Video		AV / Input / RDS
	Clear		Exit / Cancel / Clear
	Memory		Rec / Rec Mode
	Time		Sleep / Timer
	Muting		Mute / Dimmer
	Play Mode		Shift + Play /
	1		1
	2		2
	3		3
	Function		Smart / List
	Audio		Audio / Lang I/II





 

 








Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	Band		TV/Radio /
	Angle		Info / Angle
	7		7
	8		8
	9		9
	Sound Field		Sound / Title
	Subtitle		Subtitle / EQ
>10 button"/>	>10		Guide / EPG / -/-
	10/0		0
	Enter		Fav / Marker / PC
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	I<</Preset-		I<< / Preset-

 

 



 



 

 









Originalfernbedienung Ersatzfernbedienung

	Power Tv		Power
	Stereo/Mono		Audio / Lang I/II
	Tv/Video		AV / Input / RDS
	Memory		Rec / Rec Mode
	Muting		Mute / Dimmer
	1		1
	2		2
	3		3
	Function		Smart / List
	4		4
	5		5
	6		6
	Band		TV/Radio /
	7		7
	8		8
	9		9
	Sound Field		Sound / Title

Originalfernbedienung Ersatzfernbedienung

	>10		Guide / EPG / -/-
	10/0		0
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	Tv CH-		CH- / Page-
	Tv CH+		CH+ / Page+
	Enter		OK
	AMP Menu		Menu / Home

