


 



 

 







 









 

 

 



 




 

 





 

 



 

 



 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	Time/Text		Text
	Picture Mode		Format
	Audio		Dual





 



 
















 



 
Originalfernbedienung Ersatzfernbedienung

	Subtitle		Subt
	Angle		Red
	Sur		Options
	Search Mode		AV
	Repeat		Shift + Text
	A-B		Shift + Play
	Shuffle		Yellow
	SA-CD		Smart
	Album+		Ch +
	Album-		Ch -
	Zoom		Shift + Eject
	Picture Navi		TV/R
	>>I		>>I
	I<<		I<<
	Scan >>/Slow		>>
	<< Scan/<I		<<
	←-/Instant Replay/<I Step		Shift + I<<





Originalfernbedienung Ersatzfernbedienung








 









 

 



 

 




	Step II>/Instant Advance/·→	 + 	Shift + >>I
	Play		Play
	Pause		Pause
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Display		Info
	Menu		Menu
	Top Menu	 + 	Shift + Menu
	Return		Back
	Stop		Stop
	SA-CD/CD		Media

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Ok
	Tv/Video		TV/R
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

