






 



 







 

 

 
 
 





 

 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Clear		Exit
	Enter		Pre Ch
	TV/DVD / Input		AV
	Aspect		Shift + Format
	SA-CD		Smart

Originalfernbedienung Ersatzfernbedienung

	SA-CD/CD		Media
	Shuffle		Yellow
	A-B		Shift + Play
	Audio		Dual
	Subtitle		Subt
	Angle		Red
	Picture Navi		3D
	Time/Text		Text
	Repeat		Shift + Text
	Sur		Options
	Picture Mode		Format
	Search Mode		TV/R
	Replay		Shift + I<<
	I<<		I<<
	>>I		>>I
	< [<<]		Ch -
	[>>] >		Ch +



Multi/2CH



Originalfernbedienung Ersatzfernbedienung




 

 

 







 



 


 
 


 



	<< Scan/<		<<
	Scan >>/Slow		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Display		Info
	Menu		Menu
	Top Menu		D. Menu
	Return		Back

Originalfernbedienung Ersatzfernbedienung





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Enter		Ok
	TV/DVD		TV/R
	Vol+		Vol +
	Vol-		Vol -

Originalfernbedienung Ersatzfernbedienung

