



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
 Power	 Power	 Play MD	 Shift + Play
 VIDEO	 1	 Pause MD	 Shift + Pause
 TV	 2	 Stop MD	 Shift + Stop
 TAPE / MD	 3	 I<< MD	 Shift + I<<
 CD	 4	 >>I MD	 Shift + >>I
 TUNER	 5	 Rev. Play Tape Deck A	 Left
 PHONO	 6	 Play Tape Deck A	 Right
 TAPE2 / MD	 7	 Stop Tape Deck A	 Ok
 Preset-	 Ch -	 << Tape Deck	 <<
 Preset+	 Ch +	 >> Tape Deck	 >>
 TUNER Shift	 Media	 Rev. Play Tape Deck B	 Shift + Left
 Play CD	 Play	 Play Tape Deck B	 Shift + Right
 Pause CD	 Pause	 Stop Tape Deck B	 Shift + Ok
 Stop CD	 Stop	 << Tape Deck	 Shift + <<
 I<< CD	 I<<	 >> Tape Deck	 Shift + >>
 >>I CD	 >>I	 Bass Boost	 Smart
 D.Skip CD	 List	 Muting	 Mute



