






 







 
 




 
















Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-------------|---|-------|
|  | Power |  | Power |
|  | VIDEO |  | 1 |
|  | TV |  | 2 |
|  | TAPE / MD |  | 3 |
|  | CD |  | 4 |
|  | TUNER |  | 5 |
|  | PHONO |  | 6 |
|  | TAPE2 / MD |  | 7 |
|  | Preset- |  | Ch - |
|  | Preset+ |  | Ch + |
|  | TUNER Shift |  | Media |
|  | Play CD |  | Play |
|  | Pause CD |  | Pause |
|  | Stop CD |  | Stop |
|  | I<< CD |  | I<< |
|  | >>I CD |  | >>I |
|  | D.Skip CD |  | List |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|-----------------------|---|---------------|
|  | Play MD |  | Shift + Play |
|  | Pause MD |  | Shift + Pause |
|  | Stop MD |  | Shift + Stop |
|  | I<< MD |  | Shift + I<< |
|  | >>I MD |  | Shift + >>I |
|  | Rev. Play Tape Deck A |  | Left |
|  | Play Tape Deck A |  | Right |
|  | Stop Tape Deck A |  | Ok |
|  | << Tape Deck |  | << |
|  | >> Tape Deck |  | >> |
|  | Rev. Play Tape Deck B |  | Shift + Left |
|  | Play Tape Deck B |  | Shift + Right |
|  | Stop Tape Deck B |  | Shift + Ok |
|  | << Tape Deck |  | Shift + << |
|  | >> Tape Deck |  | Shift + >> |
|  | Bass Boost |  | Smart |
|  | Muting |  | Mute |



