












 

 




 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	Sleep		Sleep
	Display		Info
	Tuner / Band		Green
	Function		Options
	I<< / Preset-		I<<
	>>I / Preset+		>>I
	<< / Tuning- / <I Slow		<<
	>> / Tuning+ / Slow I>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	DVD Top Menu / Album-		Ch -
	DVD Top Menu / Album-		Menu
	DVD Menu / Album+		Ch +
	DVD Menu / Album+		D. Menu

Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	DVD Display		Shift + Info
	Return		Back
	Muting		Mute
	Vol+		Vol +
	Vol-		Vol -
	DVD Set Up		List
	Auto Format		3D
	Night Mode		Format
	Audio		Dual
	Angle		Guide
	Subtitle		Subt
	Repeat		Text



Album+

