 
 
 
 

 
 
 

 

 

 

 
 

 


 
 
 
 
 
 
 


 
 
 



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Play Mode	 + 	Shift + Play
	Tv/Video		TV/R
	Repeat Mode		Text
	Menu		Smart
	Display		Info
	Muting		Mute
	Auto Format		List
	Night Mode		AV
	Clear		Exit
	Audio		Dual
	Angle		Red
	Subtitle		Subt
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
	>10 / -/--		Guide
	Enter		Pre Ch
	Sound Field+		Ch +
	Sound Field-		Ch -
	Function		Media
	Tuner Band		Format
	Vol+		Vol +
	Vol-		Vol -
	I<</Preset-		I<<
	>>I/Preset+		>>I



