



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Function		Menu
	Sleep		Sleep
	Play CD		Play
	Tuner/Band		Green
	<> Deck A		Yellow
	<> Deck B		Blue
	D.Skip		Options
	Check		Text
	Clear		Exit
	Dimmer		Smart
	I<</Tuning-		I<<
	>>/I/Tuning+		>>I
	Stop		Stop
	<<		<<
	>>		>>
	Pause		Pause




 




Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Play MD		Shift + Play
	Stop MD		Shift + Stop
	GEQ		Dual
	P File		Subt
	Effect		TV/R
	Pro Logic		3D
	T Tone		Media
	DSP		Info
	Volume+		Vol +
	Volume-		Vol -
	Rear+		Ch +
	Rear-		Ch -





Originalfernbedienung **Ersatzfernbedienung**

 CENTER	Center+		2
 CENTER	Center-		5
 CLOCK/ TIMER SET	Clock/Timer/SET	 E-MANUAL D.MENU	D. Menu
 TIMER SELECT	Timer/Select	 TIMER AV	AV

Originalfernbedienung **Ersatzfernbedienung**

