



 


 

 


 






 




 



 

 





 



 

 
 
 





 

 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info / Angle
	[=]		Text / Goto
	YouTube		Shift + Yellow / YouTube /
	Netflix		Shift + Red / Netflix /
	Disney Plus		Shift + Green / APP /
	prime video		Shift + Blue / Prime Video /

Random

Originalfernbedienung Ersatzfernbedienung

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Guide		Guide / EPG / -/-
	Rec List		Smart / List
	Source		AV / Input / RDS
	*		Menu / Home
	Micro		Display / Media
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Back		Back / Return
	TV		TV/Radio /
	Home		Shift + Menu / Home





Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Recall		Fav / Marker / PC
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	[...]		Subtitle / EQ
	Help		Zoom / Size
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Exit		Exit / Cancel / Clear

Originalfernbedienung Ersatzfernbedienung

