









 














 


















Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Display		Display / Media
	Vol+		Vol+
	Vol-		Vol-
	Enter		OK
	Folder+		CH+ / Page+
	Folder-		CH- / Page-
	Disc Skip		Picture / Format
	EQ		Subtitle / EQ
	Clear		Exit / Cancel / Clear
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	>>		>> / Tune+
	<<		<< / Tune-
	>>I/+		Right

Originalfernbedienung Ersatzfernbedienung

	I<<-/		Left
	Function		Menu / Home
	Band/Tuner		6
	CD		3
	USB		8
	Play Mode/Tuning Mode		Eject / Surround
	Repeat/FM		Text / Goto
	Tuner Memory		Smart / List
	Clock/Timer		Guide / EPG / -/--
	Clock/Timer SET		Fav / Marker / PC

