





 










 



 

 

 
 






















 






Originalfernbedienung Ersatzfernbedienung

Theatre		Fav / Marker / PC
One-Touch Play	 + 	Shift + Play /
Power		Power
Sleep		Sleep / Timer
Night		Text / Goto
Dynamic Bass		Eject / Surround
TV	 + 	Shift + 1
TV		TV/Radio /
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9

 
Originalfernbedienung Ersatzfernbedienung



 

 

 

 

 




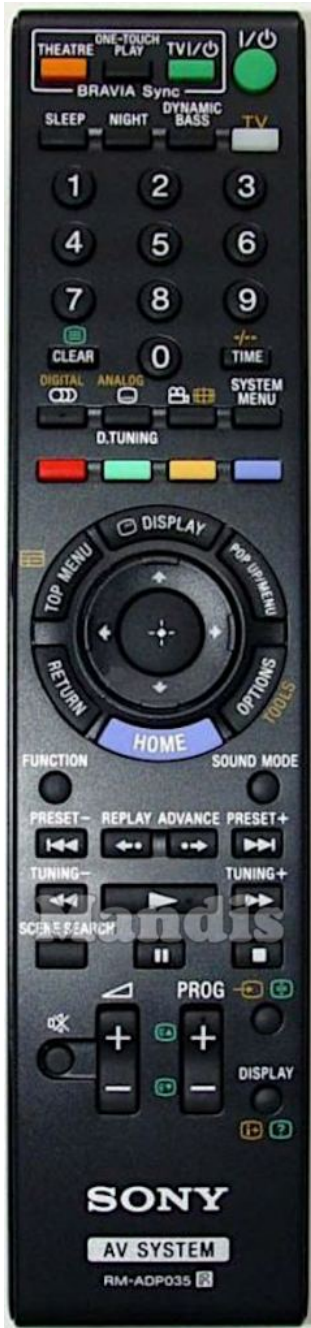


 

 

 
 
 















 

 

 



 

Clear		Exit / Cancel / Clear
0		0
Time	 + 	Shift + Sleep / Timer
Audio		Audio / Lang I/II
Subtitles / D.Tuning		Subtitle / EQ
Angle	 + 	Shift + Info / Angle
System Menu	 + 	Shift + Menu /
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
Top Menu		D.Menu / Top
Display		Display / Media
Pop Up / Menu		Menu / Home
Up		Up
Left		Left
Enter		OK



Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
Right		Right	
Return		Back / Return	
Down		Down	
Options		Setup / OPT /	
Home		Smart / List	
Function		AV / Input / RDS	
Sound Mode		Sound / Title	
I<< / Preset-		I<< / Preset-	
<- Replay		CH- / Page-	
-> Advance		CH+ / Page+	
>>I / Preset+		>>I / Preset+	
<< / Tuning-		<< / Tune-	
Play		Play / Slow	
>> / Tuning+		>> / Tune+	
Scene Search	 + 	Shift + Red / Netflix /	
Pause		Pause / Step / Freeze	
Stop		Stop / Hold	
Mute		Mute / Dimmer	
Vol+		Vol+	
Vol-		Vol-	
Display		Info / Angle	





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Text		Text / Goto
	0		0
	-/--		Shift + Guide / EPG / -/--
	Digital		Smart / List
	Analog		Display / Media
	Guide		Guide / EPG / -/--
	Home / Menu		Menu / Home
	Tools		Setup / OPT /
	Muting		Mute / Dimmer
	Volume+		Vol+
	Prog+		CH+ / Page+
	Source		AV / Input / RDS
	Volume-		Vol-
	Prog-		CH- / Page-
	[i+]		Info / Angle

