





 















 











 







 

 









Originalfernbedienung Ersatzfernbedienung

	Photo		Smart / List
	Zero Set		Setup / OPT /
	Start/Stop		Power
	Display		Display / Media
	Data Code		Menu / Home
	T		Up
	Play Memory		Exit / Cancel / Clear
	Index Memory		Info / Angle
	Memory-		Vol-
	Memory+		Vol+
	W		Down
	Search Mode		Red / Netflix / Search
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+

Originalfernbedienung Ersatzfernbedienung

	</<II		Left
	Stop		Stop / Hold
	>  >		Right
	Pause		Pause / Step / Freeze
	Slow I>		Sleep / Timer
	X2		Zoom / Size
	Mark		Fav / Marker / PC
	Audio Dub		Audio / Lang I/II

