
 




 

 










 

 

 

 

 

 









 



 









 




Originalfernbedienung Ersatzfernbedienung

	Eject/Thrater		Fav / Marker / PC
	Input Tv		AV / Input / RDS
	Power Tv	 + 	Shift + Power
	Power		Power
	1		1
	2		2
	3		3
	Vol+		Vol+
	4		4
	5		5
	6		6
	Vol-		Vol-
	7		7
	8		8
	9		9
	Timer		Sleep / Timer
	Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	0		0
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Top Menu		D.Menu / Top
	Up		Up
	Pop Up Menu		Menu / Home
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Option		Setup / OPT /
	Home/Player	 + 	Shift + Display / Media



