
 
 
 



 
 








 
 







Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Wide		Picture / Format
	Power		Power
	Theater		TV/Radio /
	<</<II/<I		<< / Tune-
	Play		Play / Slow
	I>/II>/>>		>> / Tune+
	Sync Menu		Shift + Display / Media
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	i-Manual		Text / Goto
	Scene		Shift + Fav / Marker / PC
	Top Menu		D.Menu / Top
	Menu BD/DVD		Shift + D.Menu / Top Menu
	CC/Subtitle		Subtitle / EQ
	Internet Widgets		Shift + Smart / List

Originalfernbedienung Ersatzfernbedienung

	Internet Video		Eject / Surround
	Qriocity		Audio / Lang I/II
	Favorites		Fav / Marker / PC
	Guide		Guide / EPG / -/-
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home/Menu		Menu / Home
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat





Originalfernbedienung Ersatzfernbedienung

1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
.	.	LIST SMART	Smart / List
0	0	HDMI - BAT	0
ENT	ENT	CLEAR EXIT CANCEL	Exit / Cancel / Clear
VOL +	Vol+	+ VOL	Vol+
CH +	CH+	+ CH PAGE	CH+ / Page+
Muting	Muting	DIMMER MUTE	Mute / Dimmer
Vol-	Vol-	- VOL	Vol-
CH-	CH-	- CH PAGE	CH- / Page-

Originalfernbedienung Ersatzfernbedienung

Jump	Jump	SIZE ZOOM	Zoom / Size








Originalfernbedienung Ersatzfernbedienung



 



 














 












	Input		AV / Input / RDS
	Power		Power
	<</< <		<< / Tune-
	Play		Play / Slow
	> > >>		>> / Tune+
	<<		<< / Preset-
	Stop		Stop / Hold
	>>		>> / Preset+
	Top Menu		D.Menu / Top
	Menu BD/DVD		Picture / Format
	Favorites		Fav / Marker / PC
	Guide		Guide / EPG / -/--
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right

Originalfernbedienung Ersatzfernbedienung

 





 






 





 






	Return		Back / Return
	Down		Down
	Options		Setup / OPT /
	Home/Menu		Menu / Home
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9




Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	Menu BD/DVD		D.Menu / Top
	Favorites		Fav / Marker / PC
	Guide		Guide / EPG / -/--
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Home/Menu		Menu / Home
	1		1
	2		2
	3		3
	4		4

 





 

 

 

 

 
 


 

 





 

 

 

 

Originalfernbedienung Ersatzfernbedienung

	5		5
	6		6
	7		7
	8		8
	9		9
	.		Smart / List
	0		0
	ENT		Exit / Cancel / Clear
	Vol+		Vol+
	CH+		CH+ / Page+
	Muting		Mute / Dimmer
	Vol-		Vol-
	CH-		CH- / Page-
	Jump		Picture / Format



 

 















 





Originalfernbedienung Ersatzfernbedienung

	Input		AV / Input / RDS
	Power		Power
	<</<I/<II		<< / Tune-
	II>/I/>>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Menu BD/DVD		D.Menu / Top
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Home/Menu		Menu / Home
	1		1
	2		2
	3		3

Originalfernbedienung Ersatzfernbedienung

	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Exit / Cancel / Clear
	Vol+		Vol+
	Muting		Mute / Dimmer
	Vol-		Vol-

