



Originalfernbedienung Ersatzfernbedienung

	Data Screen		Smart / List
	On		Power
	1		1
	2		2
	3		3
	Prog+		CH+ / Page+
	4		4
	5		5
	6		6
	Prog-		CH- / Page-
	7		7
	8		8
	9		9
	Volume+		Vol+
	0		0
	1-		Guide / EPG / -/--
	2-		Fav / Marker / PC

Originalfernbedienung Ersatzfernbedienung

	Volume-		Vol-
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Frame		Display / Media
	X2		Picture / Format
	Wake Up		OK
	X1/10		Text / Goto
	X1/5		AV / Input / RDS
	Muting		Mute / Dimmer
	Counter Reset		Back / Return
	Play		Play / Slow
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold

