 




 

 


 

 





















**Originalfernbedienung    Ersatzfernbedienung**

|   |         |   |                            |
|---|---------|---|----------------------------|
|    | Standby |    | Power                      |
|    | Auto    |    | Smart / List               |
|    | Mute    |    | Mute / Dimmer              |
|    | 1       |    | 1                          |
|    | 2       |    | 2                          |
|    | 3       |    | 3                          |
|    | 4       |    | 4                          |
|    | 5       |    | 5                          |
|    | 6       |    | 6                          |
|    | 7       |    | 7                          |
|   | 8       |   | 8                          |
|  | 9       |  | 9                          |
|  | -/--    |  | Shift + Guide / EPG / -/-- |
|  | 0       |  | 0                          |
|  | Recall  |  | Back / Return              |
|  | Vol+    |  | Vol+                       |
|  | Aspect  |  | Shift + Picture / Format   |

**Originalfernbedienung    Ersatzfernbedienung**



 

 

 

 
 
 
 

|   |         |   |                       |
|---|---------|---|-----------------------|
|    | Audio   |    | Audio / Lang I/II     |
|    | CH+     |    | CH+ / Page+           |
|    | Vol-    |    | Vol-                  |
|    | Display |    | Display / Media       |
|    | CH-     |    | CH- / Page-           |
|    | Up      |    | Up                    |
|    | Left    |    | Left                  |
|    | OK      |    | OK                    |
|    | Right   |    | Right                 |
|    | Menu    |    | Menu / Home           |
|   | Down    |   | Down                  |
|  | Exit    |  | Exit / Cancel / Clear |
|  | Input   |  | AV / Input / RDS      |
|  | P.Mode  |  | Picture / Format      |
|  | S.Mode  |  | Sound / Title         |
|  | Sleep   |  | Sleep / Timer         |
|  | FAV     |  | Fav / Marker / PC     |




**Originalfernbedienung Ersatzfernbedienung**

|   |          |   |                         |
|---|----------|---|-------------------------|
|    | FAV-     |  +      | Shift + CH- /           |
|    | FAV+     |  +      | Shift + CH+ /           |
|    | EPG      |    | Guide / EPG / -/--      |
|    | Text     |    | Text / Goto             |
|    | Hold     |  +      | Shift + Stop /          |
|    | Tv/Radio |    | TV/Radio /              |
|    | Subtitle |    | Subtitle / EQ           |
|    | Index    |    | Info / Angle            |
|    | Size     |    | Zoom / Size             |
|    | Reveal   |    | Setup / OPT /           |
|   | Subpage  |   | Eject / Surround        |
|  | Media    |  +  | Shift + Display / Media |
|  | Play     |    | Play / Slow             |
|  | Pause    |    | Pause / Step / Freeze   |
|  | <<       |    | << / Tune-              |
|  | >>       |    | >> / Tune+              |
|  | Rec      |    | Rec / Rec Mode          |

**Originalfernbedienung Ersatzfernbedienung**

|   |        |   |                             |
|---|--------|---|-----------------------------|
|  | Stop   |  | Stop / Hold                 |
|  | I<<    |  | I<< / Preset-               |
|  | >>I    |  | >>I / Preset+               |
|  | Red    |  | Red / Netflix / Search      |
|  | Green  |  | Green / APP / Repeat        |
|  | Yellow |  | Yellow / YouTube / Repeat   |
|  | Blue   |  | Blue / Prime Video / Random |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |
|   |        |   |                             |

