













 





 







 







Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Source		AV / Input / RDS
	Picture		Picture / Format
	Sound		Sound / Title
	Still		Pause / Step / Freeze
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Red		Red / Netflix / Search
	4		4
	5		5
	6		6
	Green		Green / APP / Repeat
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Blue		Blue / Prime Video / Random
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	CH -		CH- / Page-
	CH +		CH+ / Page+
	Vol -		Vol-
	Vol +		Vol+
	Guide / Size		Guide / EPG / -/--
	Index / Subtitle		Subtitle / EQ
	Sleep		Sleep / Timer




Originalfernbedienung Ersatzfernbedienung

	Text		Text / Goto
	FAV / Sub Code		Fav / Marker / PC
	TV / Reveal		TV/Radio /
	Comp / Mix		Display / Media
	Language		Audio / Lang I/II
	Cancel	+	Shift + Exit / Cancel / Clear
	Info		Info / Angle
	Recall		Back / Return
	Zoom		Zoom / Size
	I / II	+	Shift + Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

