


 
 
 
 

 


 

 










 










 
 
 


 

 

 


 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	SUB-T		Subt
	TTX		Text
	Mute		Mute
	EPG		Guide
	Lang		Dual
	Goto		Smart
	Repeat		Shift + Text
	Page+		Ch +
	Page-		Ch -
	Menu		Menu
	Exit		Exit
	FAV		Pre Ch
	Tv/Radio		TV/R
	Up/CH+		Up
	Down/CH-		Down
	Right		Right

Originalfernbedienung Ersatzfernbedienung

	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Recall		Back
	Info		Info
	<<		<<





Originalfernbedienung Ersatzfernbedienung



 
 
 
 















	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause/Timeshift		Pause
	Stop		Stop
	Rec		Rec
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	PVR		AV
	V-Format		Format
	Aspect		3D
	Timer		Shift + AV

Originalfernbedienung Ersatzfernbedienung






 
 
 

 
 
 


 








 



 

 







Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Sub-T		Subt
	TTX		Text
	Mute		Mute
	EPG		Guide
	Audio		Dual
	GOTO		Shift + Guide
	Repeat		Shift + Text
	Page +		Shift + Up
	Page -		Shift + Down
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right

Originalfernbedienung Ersatzfernbedienung

	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	FAV		Shift + Pre Ch
	TV / Radio		TV/R
	Recall		Pre Ch
	Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Originalfernbedienung Ersatzfernbedienung

	0		0
	<< Rev		<<
	>> Fwd		>>
	I<< Prev		I<<
	>>I Next		>>I
	Play		Play
	Pause / Timeshift		Pause
	Stop		Stop
	Rec		Rec
	Red / PVR		Red
	Green / V-Format		Green
	Green / V-Format		Format
	Yellow / Aspect		Yellow
	Yellow / Aspect		Shift + Format
	Blue / Timer		Blue
	Blue / Timer		AV

Originalfernbedienung Ersatzfernbedienung

