



Originalfernbedienung Ersatzfernbedienung

	Stop		Stop
	Stop		Power
	Prog		Sleep
	Subtitle		Subt
	Open / Close		Eject
	OSD		Info
	Step		Shift + Pause
	A-B		Shift + Text
	Repeat		Text
	N/P		3D
	V-Mode		D. Menu
	Title		List
	Slow		Shift + Play
	Menu		Menu
	Clear		Exit
	PBC		Smart
	Setup		Options

Originalfernbedienung Ersatzfernbedienung

	Return		Back
	Up		Up
	Zoom		Shift + Eject
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Angle		Format
	USB		Media
	Play		Play
	Pause		Pause
	R/L		TV/R
	Language		Dual
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	1		1





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
2	2	2	2				
3	3	3	3				
4	4	4	4				
5	5	5	5				
6	6	6	6				
7	7	7	7				
8	8	8	8				
9	9	9	9				
10+	10+	GUIDE	Guide				
100	10/0	0	0				
RESET	Reset	TIMER AV	AV				
GOTO	Goto	FAV PRE-CH	Pre Ch				
REV	REV	<<	<<				
FWD	FWD	>>	>>				
PREV	Prev	<<<	I<<				
NEXT	Next	>>>	>>I				

