
 

 
 
 

 

 





 

 
 
 
 
 

 







 





**Originalfernbedienung Ersatzfernbedienung**

	Stop		Stop
	Stop		Power
	Prog		Sleep
	Subtitle		Subt
	Open / Close		Eject
	OSD		Info
	Step		Shift + Pause
	A-B		Shift + Text
	Repeat		Text
	N/P		3D
	V-Mode		D. Menu
	Title		List
	Slow		Shift + Play
	Menu		Menu
	Clear		Exit
	PBC		Smart
	Setup		Options

**Originalfernbedienung Ersatzfernbedienung**

	Return		Back
	Up		Up
	Zoom		Shift + Eject
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Angle		Format
	USB		Media
	Play		Play
	Pause		Pause
	R/L		TV/R
	Language		Dual
	Mute		Mute
	Vol+		Vol +
	Vol-		Vol -
	1		1





**Originalfernbedienung   Ersatzfernbedienung**

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10+		Guide
	10/0		0
	Reset		AV
	Goto		Pre Ch
	REV		<<
	FWD		>>
	Prev		<<
	Next		>>

**Originalfernbedienung   Ersatzfernbedienung**