














 
 


 








 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	V.Mode		Picture / Format
	OSD		Display / Media
	P/N		AV / Input / RDS
	Program		TV/Radio /
	Menu		Menu / Home
	Title		Sound / Title
	Subtitle		Subtitle / EQ
	Angle		Info / Angle
	Search		Red / Netflix / Search
	Setup		Setup / OPT /
	1		1
	2		2
	3		3
	4		4
	5		5

Originalfernbedienung Ersatzfernbedienung

	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/--
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	PBC		Text / Goto
	Return		Back / Return
	Zoom		Zoom / Size
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold



