


 
 






 

 

 
 







 







**Originalfernbedienung    Ersatzfernbedienung**

	Standby		Power
	Mute		Mute / Dimmer
	PN		D.Menu / Top
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Zoom		Zoom / Size
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	CH+		CH+ / Page+

**Originalfernbedienung    Ersatzfernbedienung**

	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Info		Info / Angle
	Return/Exit		Back / Return
	Setup		Setup / OPT /
	Source		AV / Input / RDS
	Goto		Shift + Text /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



