
 

 
 

 

 


 
 
 



 



 

 



 


 

 
 




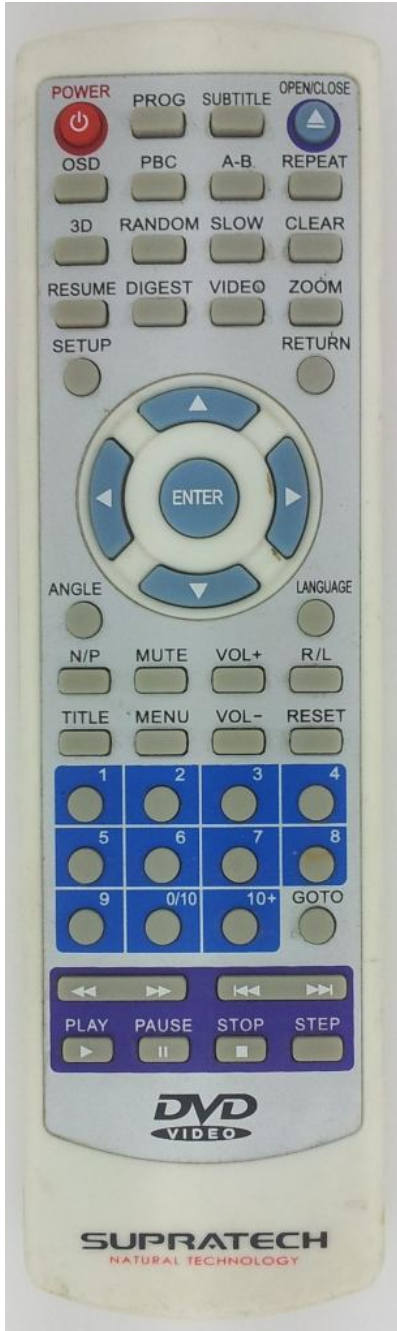 
**Originalfernbedienung Ersatzfernbedienung**

	Power		Power
	Prog		TV/Radio /
	Subtitle		Subtitle / EQ
	Open/Close		Eject / Surround
	OSD		Display / Media
	PBC		D.Menu / Top
	A-B		Yellow / YouTube / Repeat
	Repeat		Green / APP / Repeat
	3D		Shift + Zoom /
	Random		Blue / Prime Video / Random
	Slow		Shift + Play /
	Clear		Exit / Cancel / Clear
	Resume		Sound / Title
	Digest		Shift + Subtitle / EQ
	Video		Shift + 4
	Zoom		Zoom / Size
	Setup		Setup / OPT /



















 

 

 


 

**Originalfernbedienung Ersatzfernbedienung**

	Return		Back / Return
	Up		Up
	Left		Left
	Enter		OK
	Right		Right
	Angle		Info / Angle
	Down		Down
	Language		Audio / Lang I/II
	N/P		Picture / Format
	Mute		Mute / Dimmer
	Vol+		Vol+
	R/L		Smart / List
	Title		Shift + Sound / Title
	Menu		Menu / Home
	Vol-		Vol-
	Reset		Sleep / Timer
	1		1

 

 





Originalfernbedienung Ersatzfernbedienung

	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/10		0
	10+		Guide / EPG / -/--
	Goto		Text / Goto
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Play		Play / Slow
	Pause		Pause / Step / Freeze

Originalfernbedienung Ersatzfernbedienung

	Stop		Stop / Hold
	Step		Shift + Pause / Step /

