































 





**Originalfernbedienung    Ersatzfernbedienung**

	Power		Power
	Source		AV / Input / RDS
	Zoom		Zoom / Size
	Shut Down		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	↑_		Back / Return
	Enter		OK
	CH+		CH+ / Page+

**Originalfernbedienung    Ersatzfernbedienung**

	CH-		CH- / Page-
	Vol+		Vol+
	Vol-		Vol-
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Mute		Mute / Dimmer
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

