

 



 

 


 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Home	 + 	Shift + Menu /
	Audio		Audio / Lang I/II
	Sleep		Sleep / Timer
	Subtl		Subtitle / EQ
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV/Radio		TV/Radio /
	0		0
	Recall		Back / Return

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	Mano/Mouse		Smart / List
	P-		CH- / Page-
	Info		Info / Angle
	Up		Up
	Entrada		AV / Input / RDS
	Left		Left
	OK		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Salir		Exit / Cancel / Clear
	Imagen		Picture / Format
	Sonido		Sound / Title



