



 
 







 

 

 









 
 

 
 

 








 
 

 

 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Audio		Dual
	Subtl		Subt
	Sleep		Sleep
	USB		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DTV/Radio		TV/R
	Recall		Pre Ch

Originalfernbedienung Ersatzfernbedienung

	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	Text		Text
	P+		Ch +
	P-		Ch -
	Info		Info
	Entrada		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu		Menu
	Salir		Exit
	Imagen		Format
	Sonido		Shift + Dual





Originalfernbedienung Ersatzfernbedienung

	Tamaño		3D
	Guía		Guide
	Play		Play
	Pause/TS		Pause
	Detener		Stop
	Grabar		Rec
	List		List
	Red		Red
	I<<		I<<
	Green		Green
	>>I		>>I
	Yellow		Yellow
	<<		<<
	Blue		Blue
	>>		>>

Originalfernbedienung Ersatzfernbedienung

