
 
 


 
 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Gravar		Rec
	Lista		List
	Silêncio		Mute
	Guia TV		Guide
	Áudio		Dual
	Info		Info
	Teletexto		Text
	Legendas		Subt
	Menu		Menu
	Sair		Exit
	Up / P+		Up
	Up / P+		Ch +
	Down / P-		Down
	Down / P-		Ch -
	Right / Vol+		Vol +
	Right / Vol+		Right

Originalfernbedienung Ersatzfernbedienung

	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Multimédia		Media
	TV / Rádio		TV/R
	Voltar		Back
	lr		Pre Ch
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung

	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Repetir	+	Shift + Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Originalfernbedienung Ersatzfernbedienung

