



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide
	0		0
	Input Digital		Red
	Input TV/AUX		Green
	TUNER (FM/AM)		Yellow
	DVD		Blue

Originalfernbedienung Ersatzfernbedienung

	Setup		Options
	Pro Logic II Mode		Dual
	Listening		TV/R
	Repeat		Text
	A-B	 + 	Shift + Text
	Program	 + 	Shift + Sleep
	Eject		Eject
	<< / Preset-		<<
	>> / Preset+		>>
	<< / Tuning-		<<
	>> / Tuning+		>>
	> / FM Mode		Media
	> / Memory		3D
	Stop		Stop
	Play / Pause		Play
	Play / Pause		Pause
	Title		Pre Ch




 

 




Originalfernbedienung Ersatzfernbedienung

	Up		Up
	Menu / PBC		Menu
	Left		Left
	Enter		Ok
	Display		Info
	Right		Right
	Down		Down
	Return		Back
	PAL/NTSC		Format
	Muting		Mute
	Volume/Adj-		Vol -
	Volume/Adj+		Vol +
	Audio		Shift + Dual
	Subtitle		Subt
	EEPS		Ch -
	Select		Smart
	Go To		Ch +

Originalfernbedienung Ersatzfernbedienung

	Zoom		Shift + Eject
	Angle		Exit
	Language		List

