


**Originalfernbedienung Ersatzfernbedienung**

	1		1
	2		2
	3		3
	Power		Power
	4		4
	5		5
	6		6
	TV/R		TV/Radio /
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	A/D		Sound / Title
	(<>) L		Audio / Lang I/II









**Originalfernbedienung Ersatzfernbedienung**

	Left / Vol-		Left
	Left / Vol-		Vol-
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Mute		Mute / Dimmer
	Menu / Setup		Menu / Home
	Menu / Setup		Setup / OPT /
	Down / CH-		Down
	Down / CH-		CH- / Page-
	Audio1 -		<< / Tune-
	Audio1 +		>> / Tune+
	Set / Info		Info / Angle
	Next / ESC		Exit / Cancel / Clear
	Audio2 -		I<< / Preset-
	Audio2 +		>>I / Preset+
	Down		Smart / List





**Originalfernbedienung   Ersatzfernbedienung**

	Stop / Recall		Stop / Hold
	Stop / Recall		Back / Return
	A/B / ADR		Yellow / YouTube / Repeat
	Memo		Fav / Marker / PC

**Originalfernbedienung   Ersatzfernbedienung**