


 
 

 
 
 

 


 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep
	Mute		Mute
	Timer		AV
	EPI		Guide
	SUBTL		Subt
	Audio		Shift + Dual
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0

Originalfernbedienung Ersatzfernbedienung

	16:9		Format
	Lang		Dual
	RCL		Back
	FAV		Pre Ch
	Page+ / Timeshift		Shift + Ch +
	Page- / V-Format		Shift + Ch -
	Page- / V-Format		Shift + Format
	Up / CH+		Up
	Up / CH+		Ch +
	Down / CH-		Down
	Down / CH-		Ch -
	Right / Vol+		Right
	Right / Vol+		Vol +
	Left / Vol-		Left
	Left / Vol-		Vol -
	OK		Ok
	Menu		Menu





Originalfernbedienung Ersatzfernbedienung

	Info		Info
	TXT		Text
	Exit		Exit
	Red / SAT		Red
	Green / Zoom		Green
	Green / Zoom		Eject
	Yellow / Pause		Yellow
	Yellow / Pause		Shift + Pause
	Blue / TV/Radio		Blue
	Blue / TV/Radio		TV/R
	<<<		<<<
	>>>		>>>
	Play / Pause		Play
	Play / Pause		Pause
	Stop		Stop
	<<<		<<<
	>>>		>>>

Originalfernbedienung Ersatzfernbedienung

	Slow		Shift + Play
	Rec		Rec
	Media		Media
	Game		Smart
	PVR		Shift + Smart
	HDD		Shift + Media

