


































Originalfernbedienung Ersatzfernbedienung

Power		Power
Info		Info / Angle
Mute		Mute / Dimmer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
MTS		Display / Media
C.C		Smart / List
Return		Back / Return
Vol+		Vol+

Originalfernbedienung Ersatzfernbedienung

Vol-		Vol-
CH+		CH+ / Page+
CH-		CH- / Page-
Guide		Guide / EPG / -/--
Fav		Fav / Marker / PC
Exit		Exit / Cancel / Clear
Up		Up
Left		Left
Enter		OK
Right		Right
Down		Down
Input		AV / Input / RDS
Menu		Menu / Home
Picture		Picture / Format
Sound		Sound / Title
Sleep		Sleep / Timer

