

 
 

 
 


 





 



 





 



 


Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
PWR On/Off		2abc	 2
Mute		3def	 3
TV		4ghi	 4
Video		5jkl	 5
Menu		6mno	 6
Menu Up		7pqrm	 7
Display		8tuv	 8
Menu Left		9wxyz	 9
OK Enter		Guide Pilote	 Guide
Menu Right		0/10	 0
Menu Down		FAV Pref.	 Pre Ch
Back		Green	 D. Menu
Volume+		Yellow	 Text
CH/Page+			
Volume-			
CH/Page-			
1. ?	 1		

