
 




Originalfernbedienung Ersatzfernbedienung

	Standby		Power
	Open / Close		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Goto		Guide
	Add / Clear		Exit
	<<		<<
	>>		>>
	Pause		Pause

Originalfernbedienung Ersatzfernbedienung

	Play		Play
	Stop		Stop
	I<<		I<<
	>>I		>>I
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	Navigat		Smart
	Title		List
	Menu		Menu
	Subtitle		Subt
	Angle		Format
	Source		AV
	Rec		Rec





Originalfernbedienung Ersatzfernbedienung

TIMER	Timer	Shift + AV
EDIT	Edit	Media
USB	USB	Red
DVD	DVD	Green
HDD	HDD	Yellow
DISC OPER	Disc Oper	D. Menu
SLOW	Slow	Shift + Pause
RETURN	Return	Back
REPEAT	Repeat	Text
ZOOM	Zoom	Shift + Eject
CH+	CH+	Ch +
CH-	CH-	Ch -
P/N	P/N	TV/R
AUDIO	Audio	Dual
VOL+	Vol+	Vol +
L/P	L/P	Info
MUTE	Mute	Mute

Originalfernbedienung Ersatzfernbedienung

VOL-	Vol-	Vol -

