

 
 
 


 





 


 




 

 

 













Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open / Close		Eject
	DVD		Smart
	VCR		Media
	Display		Info
	Disc Menu		D. Menu
	Up / PR/TRK+		Up
	Up / PR/TRK+		Ch +
	Left		Left
	OK / Enter		Ok
	Right		Right
	Down / PR/TRK-		Down
	Down / PR/TRK-		Ch -
	Setup		Menu
	Return		Back
	Pause / Step		Pause
	I<< Skip		I<<

Originalfernbedienung Ersatzfernbedienung

	>>I Skip		>>I
	Stop		Stop
	<< Backward		<<
	Play		Play
	>> Forward		>>
	Program		Sleep
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0





Originalfernbedienung Ersatzfernbedienung













 




















AUDIO	Audio	SOUND DUAL	Dual
SUBTITLE	Subtitle	AD SUBT	Subt
ZOOM	Zoom	SHIFT + ZOOM	Shift + Eject
ANGLE	Angle	PICTURE FORMAT	Format
MARKER	Marker	FAV PRE-CH	Pre Ch
SEARCH	Search	SEARCH TV/R	TV/R
TITLE	Title	+ VOL	Vol +
REPEAT	Repeat	REPEAT TEXT	Text
RANDOM CM SKIP	Random	ECO 3D	3D
A-B LP	A-B	SHIFT + REPEAT TEXT	Shift + Text

Originalfernbedienung Ersatzfernbedienung


 





 

 

 

 

 











 
 

 
 




Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Eject		Eject
	TV / VCR		Menu
	DVD		Smart
	VCR		Media
	AV		AV
	CLK / CNT		3D
	Up / PR/TRK+		Up
	Up / PR/TRK+		Ch +
	Down / PR/TRK-		Down
	Down / PR/TRK-		Ch -
	Right		Right
	Left		Left
	OK		Ok
	i		Info
	Pause / Step		Pause
	Stop		Stop

Originalfernbedienung Ersatzfernbedienung

	<< Backward		<<
	Play		Play
	>> Forward		>>
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Audio		Dual
	Search		TV/R
	CM Skip		Yellow





Originalfernbedienung **Ersatzfernbedienung**

	Rec / ITR		Rec
	LP		Sleep
	Show View		Options

Originalfernbedienung **Ersatzfernbedienung**

