 








 


 













 



 





 





 








 
 
 
 
 





 



 



 

 





Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Open/Close		Eject / Surround
	CD/DVD	 + 	Shift + 3
	Band		D.Menu / Top
	AUX	 + 	Shift + 7
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Sleep		Sleep / Timer
	O)))/Audio		Audio / Lang I/II

Originalfernbedienung Ersatzfernbedienung

	Sound		Sound / Title
	[...]/S-Title		Subtitle / EQ
	Return		Back / Return
	SetUp		Setup / OPT /
	Display		Display / Media
	Menu		Menu / Home
	Title	 + 	Shift + Sound / Title
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		OK
	Preset+	 + 	Shift + >>I / Preset+
	Preset-	 + 	Shift + I<< / Preset-
	Vol-		Vol-
	Vol+		Vol+
	<</Slow Scan-		<< / Tune-





Originalfernbedienung	Ersatzfernbedienung
>>/ Slow	>> / Tune+
I<< Skip/Scan-	I<< / Preset-
>>I Skip/Slow+	>>I / Preset+
Stop	Stop / Hold
Pause/Step	Pause / Step / Freeze
Play	Play / Slow
Mute	Mute / Dimmer
Program	TV/Radio /
Clear	Exit / Cancel / Clear
Repeat	Green / APP / Repeat
Repeat A-B	Yellow / YouTube / Repeat
Marker	Fav / Marker / PC
Search	Red / Netflix / Search
Angle	Info / Angle
Zoom	Zoom / Size
RDS	AV / Input / RDS
PTY	Picture / Format

Originalfernbedienung	Ersatzfernbedienung
PTY Search	Guide / EPG / -/--
Dimmer	Shift + Mute / Dimmer

