








 








 

 
 

 




 







 

 





Originalfernbedienung **Ersatzfernbedienung**

	Power		Power
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	T		TV/R
	Mouse		Options
	P+		Ch +
	P-		Ch -
	Home		Smart
	Source		AV
	Back		Back
	≡		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok

Originalfernbedienung **Ersatzfernbedienung**

	Netflix		Media
	⋮		Info
	Micro		Guide

