 





 

 
 
 








 
 
 
 
 
 
 

 



 
 

 


 

 


 
 

 
 
 






Originalfernbedienung Ersatzfernbedienung

	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Guide		Guide
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	List		List

Originalfernbedienung Ersatzfernbedienung

	P+		Ch +
	P-		Ch -
	Source		AV
	APP		Media
	History		Options
	PRE-CH		Pre Ch
	[i]		Info
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	≡		Menu
	Home		Smart
	O)/Lang		Dual
	Back		Back
	Subtitle		Subt





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	Text		Text				
	Zoom		Eject				
	3D		3D				
	Sleep		Sleep				
	Rec		Rec				
	Play		Play				
	Pause		Pause				
	<<		<<				
	Stop		Stop				
	>>		>>				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

