
















Originalfernbedienung Ersatzfernbedienung

| | | |
|---------------|---|-----------------------|
| Standby / On |  | Power |
| Muting |  | Mute / Dimmer |
| Play / Pause |  | Play / Slow |
| Play / Pause |  | Pause / Step / Freeze |
| Stop |  | Stop / Hold |
| I<< / Tuning- |  | << / Tune- |
| >>I / Tuning+ |  | >> / Tune+ |
| I<< / Tuning- |  | I<< / Preset- |
| >>I / Tuning+ |  | >>I / Preset+ |
| Sleep |  | Sleep / Timer |
| Program |  | TV/Radio / |
| Input/Source |  | AV / Input / RDS |
| MP3 |  | Up |
| I<< / Tuning- |  | Left |
| Play / Pause |  | OK |
| >>I / Tuning+ |  | Right |
| Stop |  | Down |

Originalfernbedienung Ersatzfernbedienung

| | | |
|-----------------|---|-----------------------------|
| Volume+ |  | Vol+ |
| Mode |  | Smart / List |
| Next/Prog+ |  | CH+ / Page+ |
| Volume- |  | Vol- |
| Display |  | Display / Media |
| Prev./Prog- |  | CH- / Page- |
| Tape 1 Rec |  | 1 |
| Tape 1 Rew |  | 2 |
| Tape 1 Play |  | 3 |
| Tape 1 F.FWD |  | 4 |
| Tape 1 Hall/Ats |  | 5 |
| CD/Theater |  | Red / Netflix / Search |
| Repeat |  | Green / APP / Repeat |
| Tape 2 Pre./eq |  | Yellow / YouTube / Repeat |
| CD Random |  | Blue / Prime Video / Random |
| | | |
| | | |

