




 

 









 

 


 



 
 



 





| Originalfernbedienung | Ersatzfernbedienung | Originalfernbedienung | Ersatzfernbedienung |
|-----------------------|--|-----------------------|---|
| On/Off |  Power | Menu Right |  Right |
| Next |  >> | Return |  Back |
| Audio Off |  Mute | Progr. |  Sleep |
| Slow Down |  Ch - | Rewind |  << |
| Slow Up |  Ch + | Menu Down |  Down |
| Auto/Track |  Media | Top Menu |  D. Menu |
| Rep/A-B |  +  Shift + Text | Volume+ |  Vol + |
| Stop |  Stop | Prev. |  I<< |
| Pause |  Pause | Volume- |  Vol - |
| Title |  List | 1 |  1 |
| Subt. |  Subt | 2 |  2 |
| Repeat/1/All |  Text | 3 |  3 |
| Zoom |  Eject | 4 |  4 |
| Menu |  Menu | Shuffle |  TV/R |
| Menu Up |  Up | 5 |  5 |
| Display |  Info | 6 |  6 |
| Menu Left |  Left | Digest |  Smart |



