


Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|----------------|---|--------|
|  | Timer On/Sleep |  | Sleep |
|  | FM Mode/Play |  | TV/R |
|  | Clock/Timer |  | AV |
|  | Function |  | Menu |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | Digit |  | Pre Ch |
|  | Memory/Time |  | Smart |
|  | MP3/RDS |  | Media |

Originalfernbedienung Ersatzfernbedienung

| | | | |
|---|------------------------|---|-------|
|  | Intro/PTY |  | Ok |
|  | I<<</>>>/Tuning |  | I<<< |
|  | >>>/>>>/Tuning |  | >>> |
|  | MP3 Folder/Preset Down |  | Ch - |
|  | MP3 Folder/Preset Up |  | Ch + |
|  | Stop/Band |  | Stop |
|  | Play |  | Play |
|  | Pause |  | Pause |
|  | Vol+ |  | Vol + |
|  | Vol- |  | Vol - |
|  | Muting |  | Mute |
|  | Standby/On |  | Power |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

