



Originalfernbedienung Ersatzfernbedienung

	Standby/On		Power
	Sleep		Sleep / Timer
	Video 1		Shift + 4
	Video 2		Shift + 8
	Video 3		Shift + 9
	EXT In		Shift + 2
	Tuner		Shift + 6
	CD		Shift + 3
	AUX		Shift + 7
	Tape		Shift + 5
	Level+		CH+ / Page+
	CH Sel		Fav / Marker / PC
	Volume+		Vol+
	Level-		CH- / Page-
	Muting		Mute / Dimmer
	Volume-		Vol-
	T.Tone		Display / Media

Originalfernbedienung Ersatzfernbedienung

	Up/PTY Select		Up
	P.Scan		Smart / List
	Left/EON TA		Left
	Enter/RDS		OK
	Right/EON PTY		Right
	Repeat 1/All		Green / APP / Repeat
	Down/Search		Down
	Dimmer		Shift + Mute / Dimmer
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	Stop		Stop / Hold
	>>I		>>I / Preset+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Auto		D.Menu / Top
	< DSP		Shift + Left





Originalfernbedienung Ersatzfernbedienung

	DSP >	+	Shift + Right
	Stereo		Audio / Lang I/II
	SP Setup		Setup / OPT /
	< Select	+	Shift + << /
	Select >	+	Shift + >> /
	Parameter		Red / Netflix / Search
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Cinema EQ		Subtitle / EQ

Originalfernbedienung Ersatzfernbedienung

	Dynamic Range		Eject / Surround
	PAL/NTSC		Picture / Format

