






 







 

 

 
 
 

 
 




 







Originalfernbedienung Ersatzfernbedienung

	Power MD		Power
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	Tape		Red
	VCR		Smart
	MD		Media
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Stop MD		Stop
	Play MD		Play
	<</<< MD		<<
	>>/>> MD		>>
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Enter		Ok
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	1 MD		1
	2 MD		2
	3 MD		3
	4 MD		4
	5 MD		5
	6 MD		6
	7 MD		7
	8 MD		8
	9 MD		9
	0 MD		0
	>10/-/- MD		Guide







 
 











 







Originalfernbedienung Ersatzfernbedienung

	Power DVD		Power
	TV		TV/R
	VCR		Smart
	Tuner/Band		Green
	Tape		Red
	MD		Media
	CD		Yellow
	DVD		Blue
	Play DVD		Play
	I<</<< DVD		<<
	Stop DVD		Stop
	>>/>>I DVD		>>
	Top Menu/Disc/Deck		Menu
	Display		Info
	Menu		D. Menu
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6









Originalfernbedienung Ersatzfernbedienung

	Power CD		Power
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	MD		Media
	Tuner/Band		Green
	Stop CD		Stop
	I<</<< CD		<<
	>>/>>I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	Up		Up
	Down		Down

Originalfernbedienung Ersatzfernbedienung

	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play

 






Originalfernbedienung Ersatzfernbedienung

	Power VCR		Power
	VCR		Smart
	Tape		Red
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	MD		Media
	Stop		Stop
	I<</<<		<<
	>>/>>I		>>
	Play		Play
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4
	5 VCR		5


 



Originalfernbedienung Ersatzfernbedienung

	6 VCR		6
	7 VCR		7
	8 VCR		8
	9 VCR		9
	0 VCR		0
	>10/-/- VCR		Guide
	Direct Tuning/Disc Enter		Text
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Top Menu/Disc/Deck		Menu
	Display		Info

 











Originalfernbedienung Ersatzfernbedienung

	Menu		D. Menu
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Power Tuner/Band		Shift + Power
	1 Tuner/Band		Shift + 1
	2 Tuner/Band		Shift + 2
	3 Tuner/Band		Shift + 3
	4 Tuner/Band		Shift + 4
	5 Tuner/Band		Shift + 5
	6 Tuner/Band		Shift + 6
	7 Tuner/Band		Shift + 7

Originalfernbedienung Ersatzfernbedienung

	8 Tuner/Band		Shift + 8
	9 Tuner/Band		Shift + 9
	0 Tuner/Band		Shift + 0
	>10/+/-		Shift + Guide

