 


 


 
 
 

 

 



 



 



 


 
 
 
 







 




 

 
 
 
 



 
 



 

 




 
 




Originalfernbedienung Ersatzfernbedienung

	Power TV		Power
	Home Theater		Media
	Home Theater		Smart
	Tape		Red
	CD		Yellow
	Tuner/Band		Green
	DVD		Blue
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Display		Info
	Menu		Menu
	Stereo		Dual
	Surround		Subt
	SFC		Options



 




Originalfernbedienung Ersatzfernbedienung

	Test		Text
	Delay		Format
	Level		3D
	-		Ch -
	+		Ch +
	1 Tv		1
	2 Tv		2
	3 Tv		3
	4 Tv		4
	5 Tv		5
	6 Tv		6
	7 Tv		7
	8 Tv		8
	9 Tv		9
	0 Tv		0
	>10 Tv		Guide
	CH-		Shift + Ch -





Originalfernbedienung    Ersatzfernbedienung

 

	CH+	 + 	Shift + Ch +
	Tv/Video		AV
	Disc/Deck 1/2		D. Menu
	Muting		Mute
	Vol-		Vol -
	Vol+		Vol +

Originalfernbedienung    Ersatzfernbedienung






**Originalfernbedienung Ersatzfernbedienung**

	Power DVD		Power
	Home Theater		Media
	Home Theater		Smart
	Tape		Red
	CD		Yellow
	Tuner/Band		Green
	DVD		Blue
	Play DVD		Play
	I<</<< DVD		<<
	Stop DVD		Stop
	>>/>>I DVD		>>
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Display		Info

**Originalfernbedienung Ersatzfernbedienung**

	Menu		Menu
	Stereo		Dual
	Surround		Subt
	SFC		Options
	Test		Text
	Delay		Format
	Level		3D
	-		Ch -
	+		Ch +
	1 DVD		1
	2 DVD		2
	3 DVD		3
	4 DVD		4
	5 DVD		5
	6 DVD		6
	7 DVD		7
	8 DVD		8





**Originalfernbedienung**   **Ersatzfernbedienung**

	9 DVD		9
	0 DVD		0
>10 DVD button"/>	>10 DVD		Guide
	CH-		Shift + Ch -
	CH+		Shift + Ch +
	Disc/Deck 1/2		List
	Muting		Mute
	Vol-		Vol -
	Vol+		Vol +

**Originalfernbedienung**   **Ersatzfernbedienung**




 



 





 



 
 


 

 



 
 


 





**Originalfernbedienung Ersatzfernbedienung**




 
	Power CD		Power
	Power Tape	 + 	Shift + Power
	Home Theater		Media
	Home Theater		Smart
	Tape		Red
	CD		Yellow
	Tuner/Band		Green
	DVD		Blue
	Play Tape	 + 	Shift + Play
	Play CD		Play
	I<</<< Tape	 + 	Shift + <<
	I<</<< CD		<<
	Stop Tape	 + 	Shift + Stop
	Stop CD		Stop
	>>/>>I Tape	 + 	Shift + >>
	>>/>>I CD		>>
	Up		Up

**Originalfernbedienung Ersatzfernbedienung**

	Left		Left
	Select		Ok
	Right		Right
	Down		Down
	Display		Info
	Menu		Menu
	Stereo		Dual
	Surround		Subt
	SFC		Options
	Test		Text
	Delay		Format
	Level		3D
	-		Ch -
	+		Ch +
	Direct Tuning/Disc Enter		D. Menu
	1 CD-Tape		1
	2 CD-Tape		2





Originalfernbedienung		Ersatzfernbedienung		Originalfernbedienung		Ersatzfernbedienung	
	3 CD-Tape		3				
	4 CD-Tape		4				
	5 CD-Tape		5				
	6 CD-Tape		6				
	7 CD-Tape		7				
	8 CD-Tape		8				
	9 CD-Tape		9				
	0 CD-Tape		0				
	>10 CD-Tape		Guide				
	CH-		Shift + Ch -				
	CH+		Shift + Ch +				
	Disc/Deck 1/2		List				
	Disc/Deck 1/2		Shift + List				
	Muting		Mute				
	Vol-		Vol -				
	Vol+		Vol +				





**Originalfernbedienung    Ersatzfernbedienung**

	Power VCR		Power
	Power Tuner/Band	 + 	Shift + Power
	Home Theater		Media
	Home Theater		Smart
	Tape		Red
	CD		Yellow
	Tuner/Band		Green
	DVD		Blue
	Play		Play
	I<</<<		<<
	Stop		Stop
	>>/>>I		>>
	Up		Up
	Left		Left
	Select		Ok
	Right		Right
	Down		Down

**Originalfernbedienung    Ersatzfernbedienung**

	Display		Info
	Menu		Menu
	Stereo		Dual
	Surround		Subt
	SFC		Options
	Test		Text
	Delay		Format
	Level		3D
	-		Ch -
	+		Ch +
	Direct Tuning/Disc Enter		D. Menu
	1 VCR		1
	1 Tuner/Band	 + 	Shift + 1
	2 VCR		2
	>10 VCR		Guide
	2 Tuner/Band	 + 	Shift + 2
	3 VCR		3





**Originalfernbedienung Ersatzfernbedienung**

	3 Tuner/Band	 + 	Shift + 3
	4 VCR		4
	4 Tuner/Band	 + 	Shift + 4
	5 VCR		5
	5 Tuner/Band	 + 	Shift + 5
	6 VCR		6
	6 Tuner/Band	 + 	Shift + 6
	7 VCR		7
	7 Tuner/Band	 + 	Shift + 7
	8 VCR		8
	8 Tuner/Band	 + 	Shift + 8
	9 VCR		9
	9 Tuner/Band	 + 	Shift + 9
	0 VCR		0
	0 Tuner/Band	 + 	Shift + 0
	CH-	 + 	Shift + Ch -
	CH+	 + 	Shift + Ch +

**Originalfernbedienung Ersatzfernbedienung**

	Disc/Deck 1/2		List
	Muting		Mute
	Vol-		Vol -
	Vol+		Vol +
	>10	 + 	Shift + Guide

