



Originalfernbedienung Ersatzfernbedienung

	Power		Power
	Sleep		Sleep / Timer
	Top Menu		Sound / Title
	Subtitle		Subtitle / EQ
	Display		Display / Media
	Setup		Setup / OPT /
	1		1
	2		2
	3		3
	Disc		Red / Netflix / Search
	4		4
	5		5
	6		6
	>10/-/-		Guide / EPG / -/-
	7		7
	8		8
	9		9

Originalfernbedienung Ersatzfernbedienung

	0		0
	Menu		Menu / Home
	EQ		Shift + Subtitle / EQ
	Up		Up
	Return		Back / Return
	Left		Left
	Enter		OK
	Right		Right
	Marker		Fav / Marker / PC
	3D AI		TV/Radio /
	Down		Down
	Angle		Info / Angle
	AV Effect		AV / Input / RDS
	Prologic		Zoom / Size
	CH Select		Green / APP / Repeat
	Test		Text / Goto
	Digital S.Woofer		Blue / Prime Video / Random





Originalfernbedienung Ersatzfernbedienung

	Super SRND		Eject / Surround
	VCR(EXT)/VDP(AUX)		+ Shift + 4
	Tape/Deck 1/2		+ Shift + 5
	DVD		+ Shift + 2
	Tuner/Band		+ Shift + 6
	Play Mode		Smart / List
	Cancel		Exit / Cancel / Clear
	</Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Play		Play / Slow
	Audio		Audio / Lang I/II
	Mix 2CH		Yellow / YouTube / Repeat
	<< Slow/Search		<< / Tune-
	Slow/Search >>		>> / Tune+
	Shift		Rec / Rec Mode
	Muting		Mute / Dimmer
	I<< Skip		I<< / Preset-

Originalfernbedienung Ersatzfernbedienung

	Skip >>I		>>I / Preset+
	Vol-		Vol-
	Vol+		Vol+

