

 


 
 
 

 

 



 




 



 
 


 
 
 

 




















 

 

 

 






 




 
 
 
 
 




Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	Power		Power
	Mute		Mute
	Sleep		Sleep
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0/AV		0
	Tv/Radio		TV/R
	Rec		Rec
	<<		<<
	Stop/DVR		Stop
	Play		Play
	Pause		Pause
	>>		>>
	SFI		Guide
	www		Media
	Zurück		Back
	Info/VOR		Info
	↑		>>
	↓		<<
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	P+		Ch +
	P-		Ch -
	OPT		Options





Originalfernbedienung	Ersatzfernbedienung	Originalfernbedienung	Ersatzfernbedienung
	NAV		Smart
	Vol+		Vol +
	Vol-		Vol -
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Menu		Menu
	Timer		AV
	♪		Dual
	Zoom		Eject
	TXT		Text
	I>		Format
	HDMI		Subt
	PIP		3D

